



## PREPARING THE TREATMENT

 
### 1 Selecting the dosage

From the Menu Distribution, hold down to access the dosage setting function.




### 2 Tank Filling

From the Menu Distribution, press to select the value to be set.



### 3 Selecting the field

 From the Menu Distribution, press to select the value to be set.




OK Press to reset the data.

ESC Press to exit without resetting the data.


## USE

### 1 Automatic treatment control

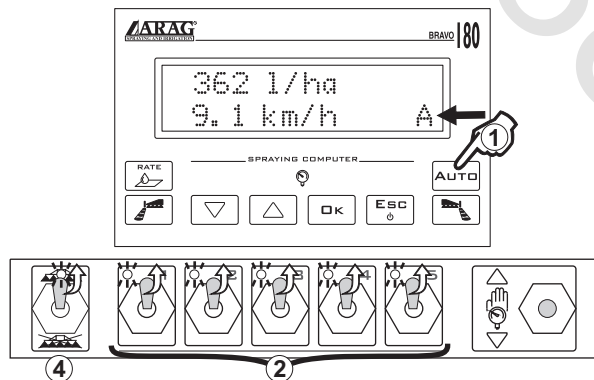


- ① Press to enable automatic mode.
- ② Turn on the section valves required.
- ③ Drive to the start of the field.
- ④ Set the main control switch up.
- ⑤ Run the treatment.

### 2 Temporary variation in rate


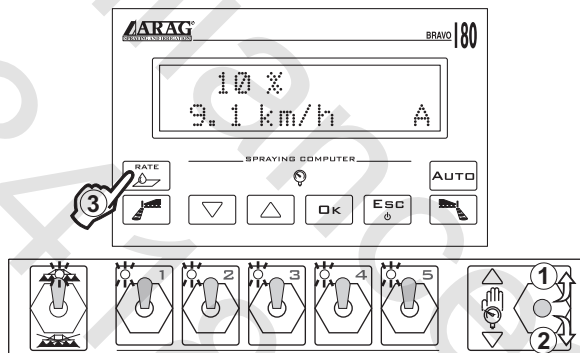


- ① Press the switch up to increase the delivery value.
- ② Press the switch down to decrease the delivery value.
- ③ Press to reset the rate variation percentage.


## OPERATING ALARMS

 

  
• The computer is not receiving the speed of the tractor and spraying is enabled (main control switch "ON").




 
• Flow rate too low to allow delivery of the set amount of liquid (the messages shown flash alternating).



 • Speed too high or low for the set dosage.



## KEY TO ITEMS ON DISPLAY

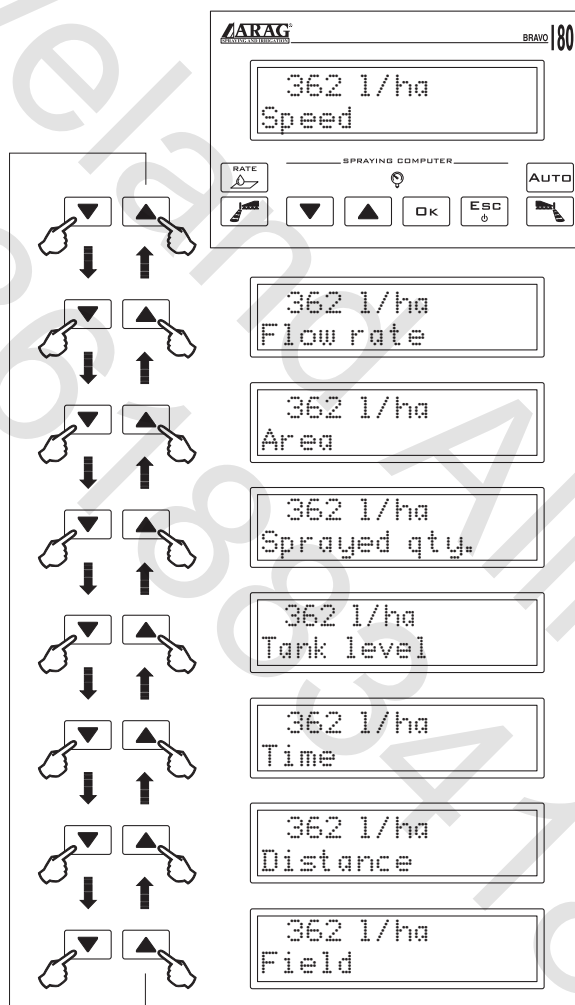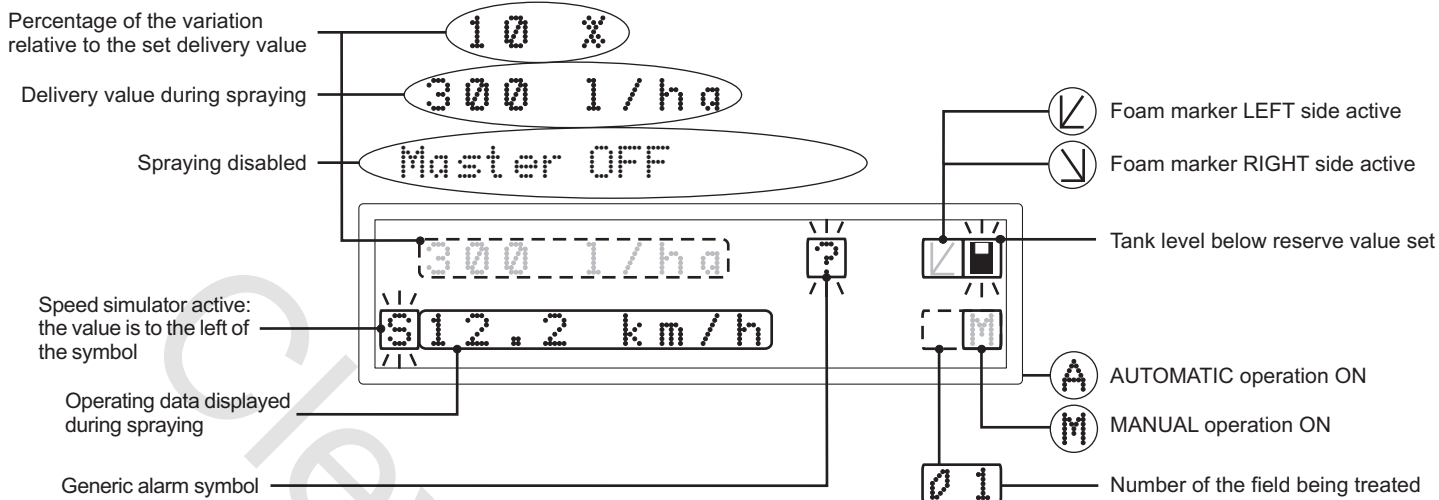

### SELECTING THE WHEEL TYPE (CONSTANT)

